 




Shake 5 times before use.
Secouer 5 fois avant utilisation.
Vor Benutzung 5 mal schütteln.
Agitar 5 veces antes de usar.
Agite 5 vezes antes de usar.
Agitare prima dell'uso.
在使用前搖動5次。

PFIB1005Y



BE8FBB025175

Panasonic

ENGLISH

Toner Cartridge Model No. KX-FA83 / KX-FA83A / KX-FA83E / KX-FA83X Installation Guide

- We recommend you replace the drum unit every fourth time you replace the toner cartridge. Be sure to use the corresponding toner cartridge.
- To prevent loss of fax memory, when replacing the toner cartridge and drum, do not unplug the machine.
- While the unit displays "PLEASE WAIT", do not open the front cover and remove the toner cartridge.

Français

Cartouche de toner Modèle KX-FA83 / KX-FA83A / KX-FA83E / KX-FA83X
Guide d'installation